



ALANERA (10857 series)

Installation instructions for:


Fiat Ducato /Dodge RAM ProMaster 2014->2020 (X290 chassis)

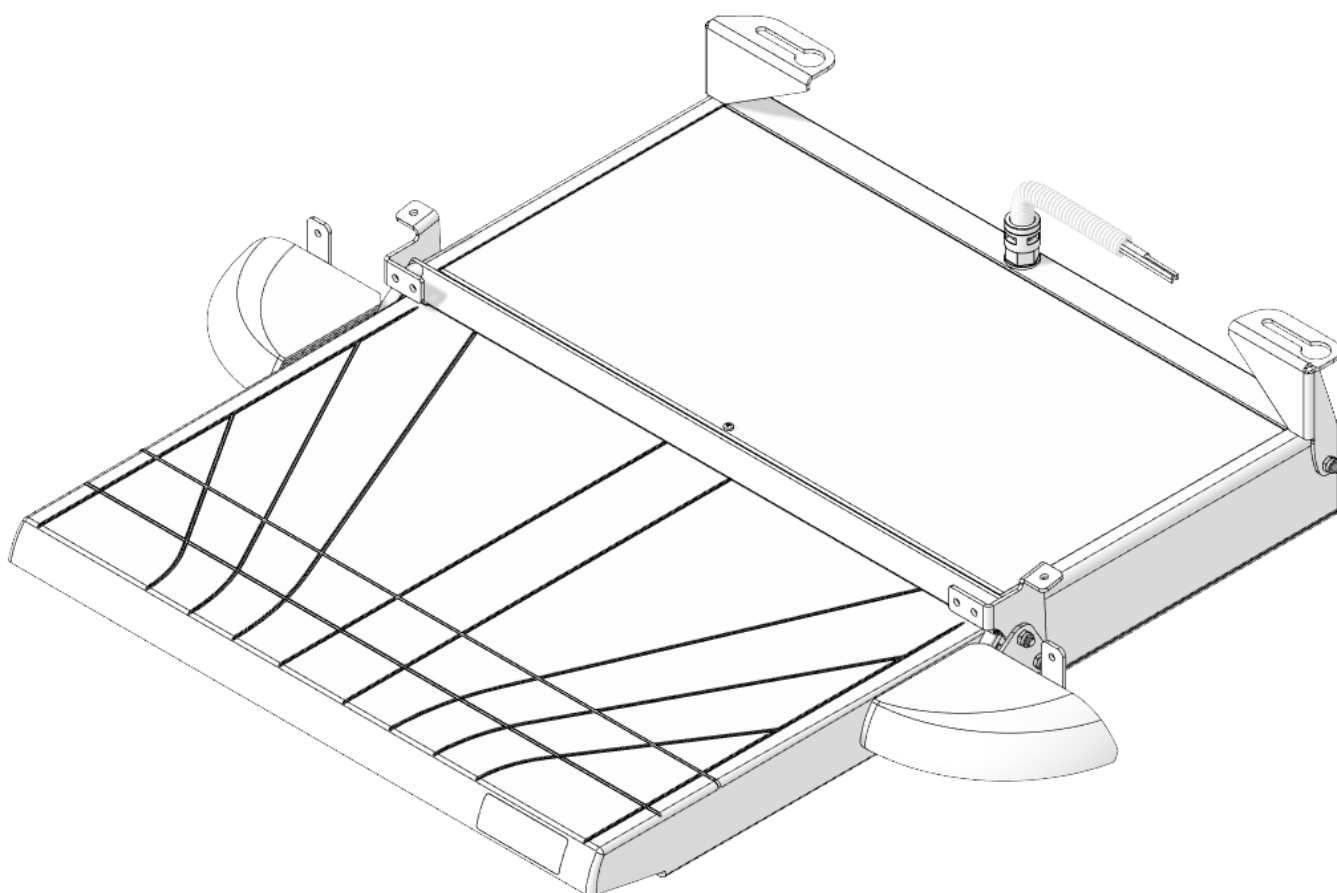


1








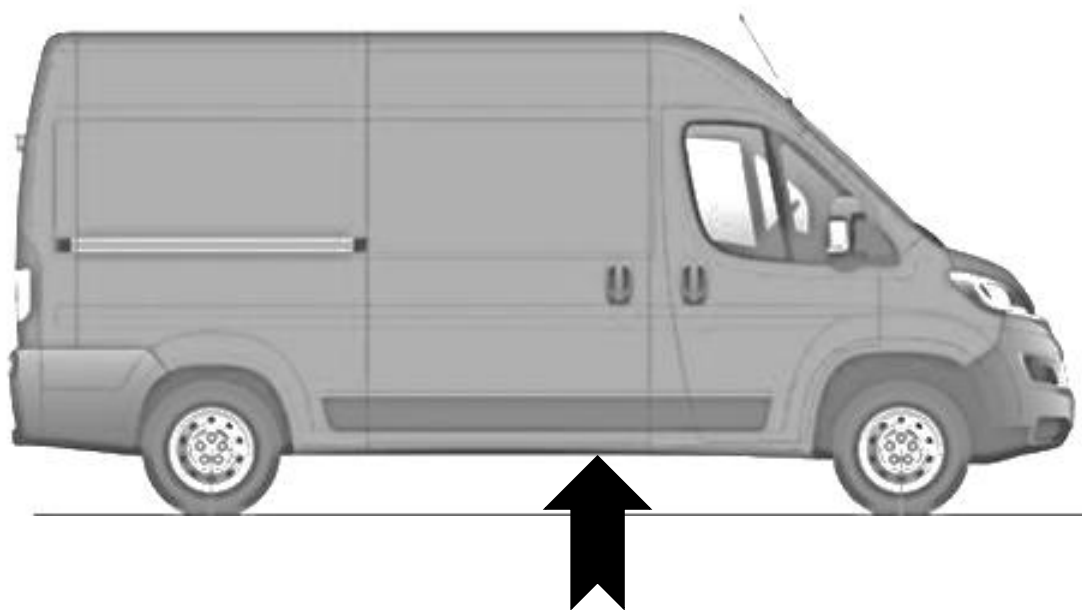


2

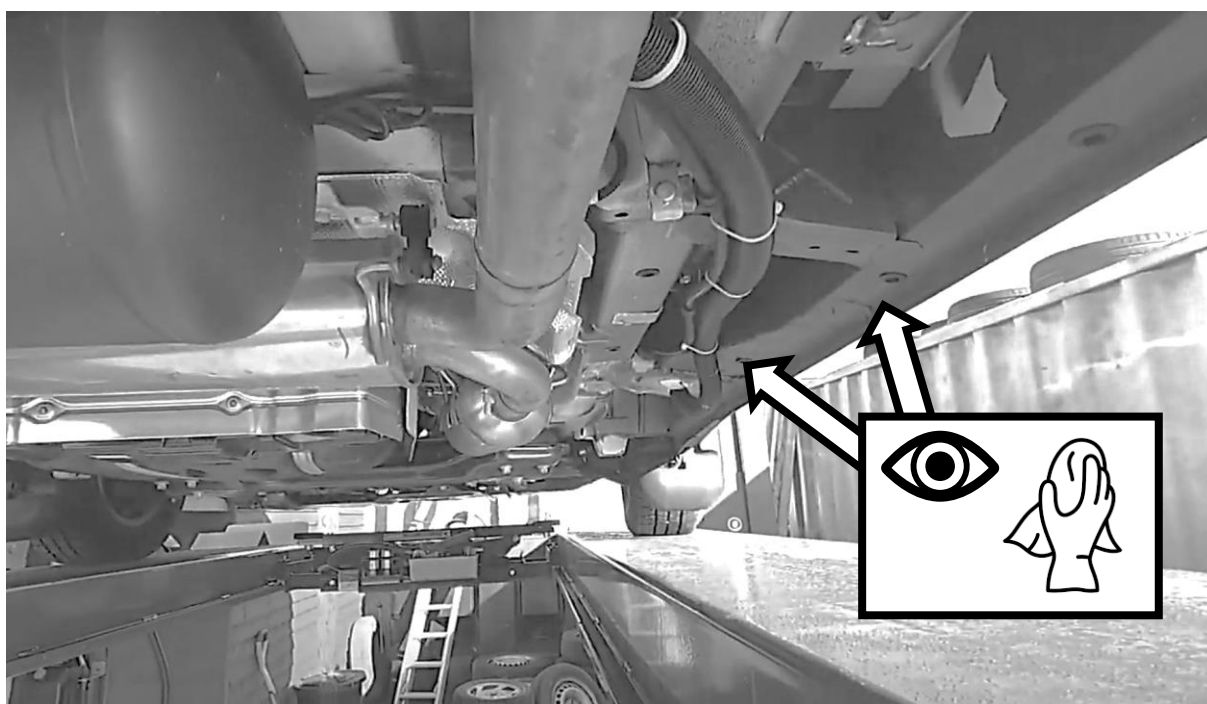


3

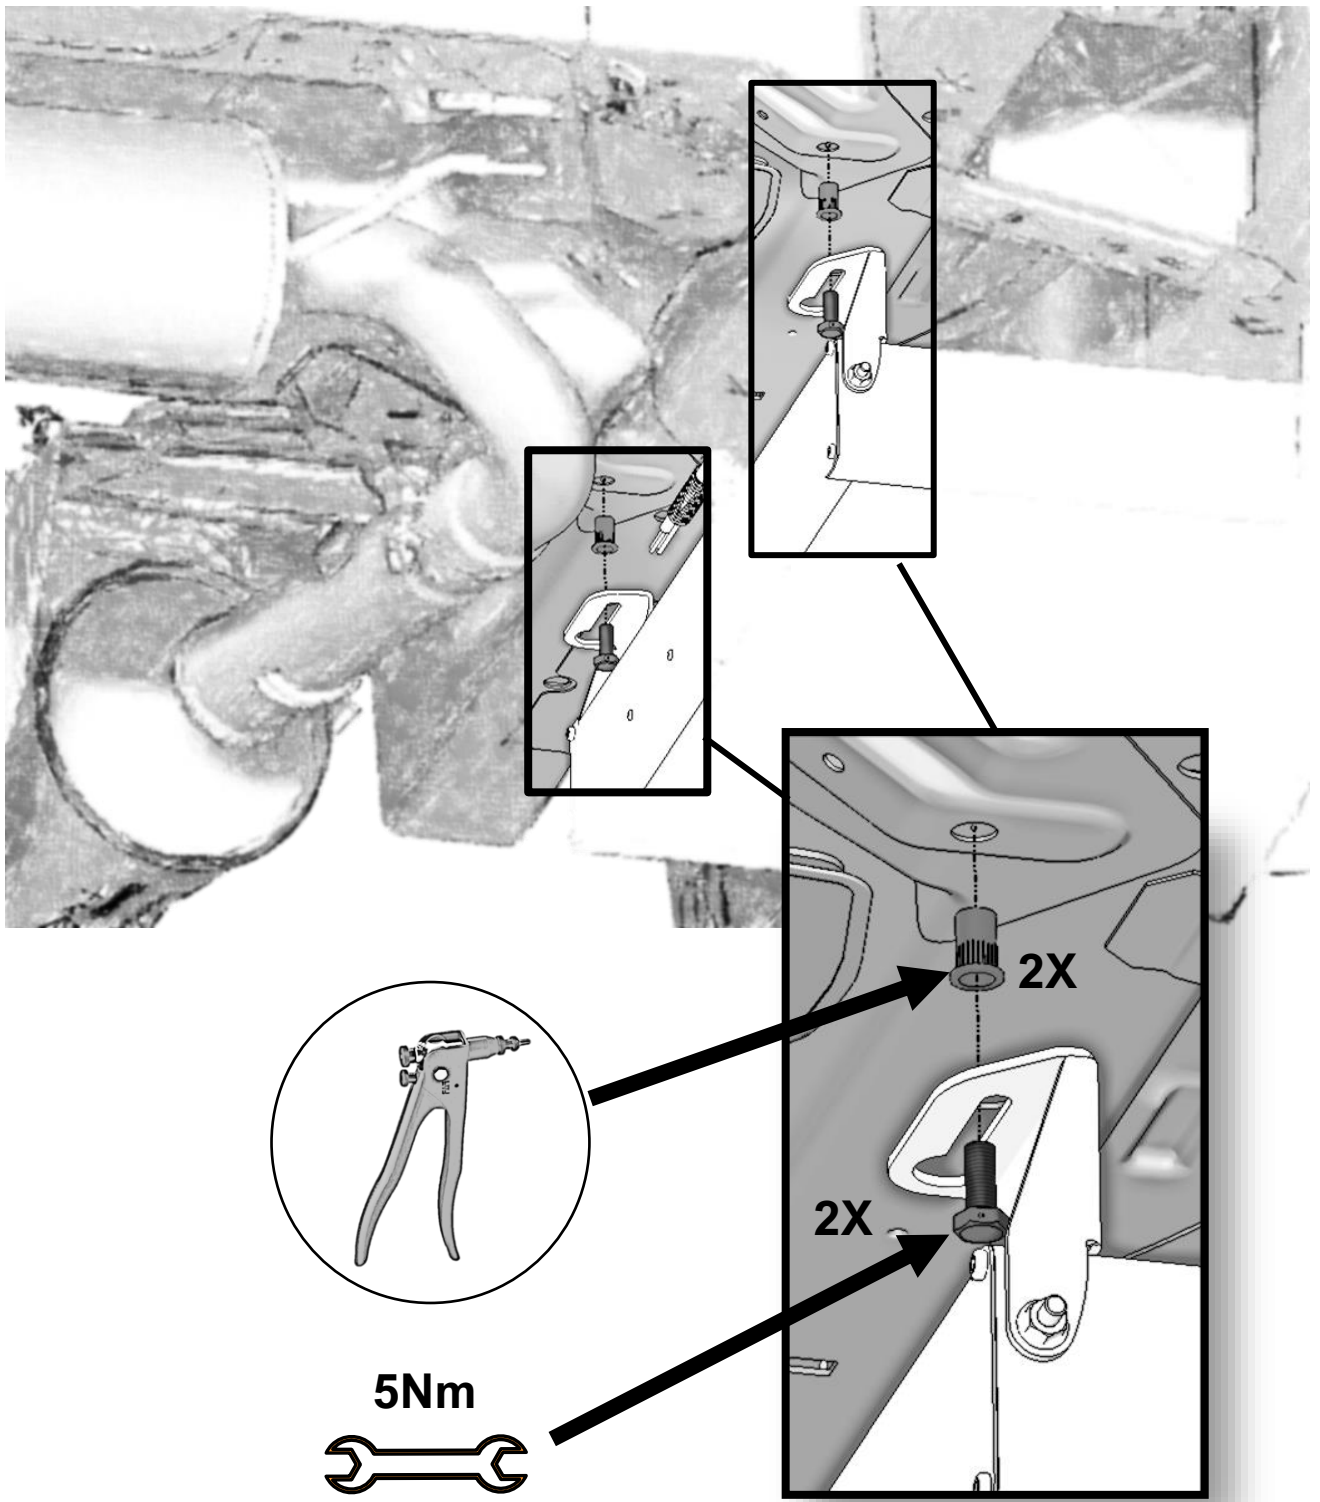

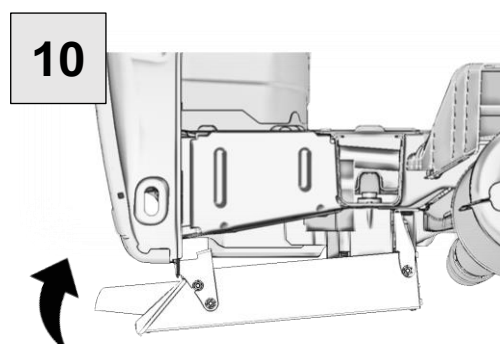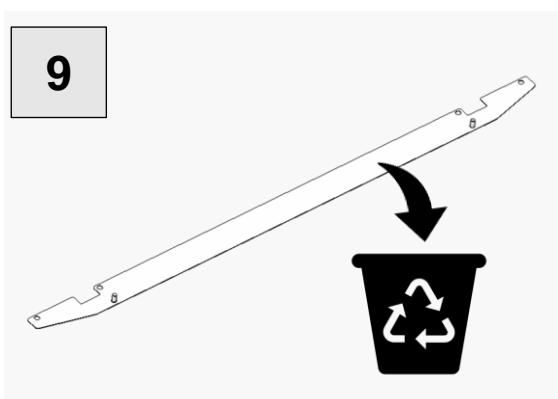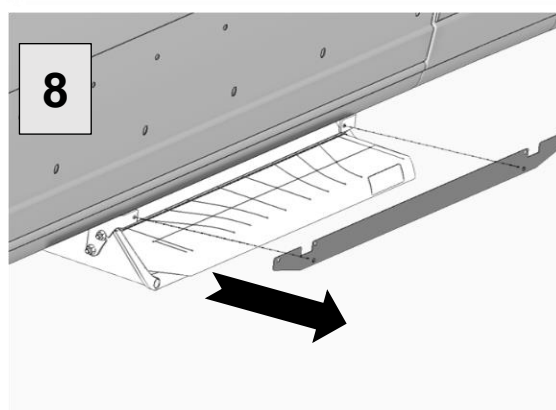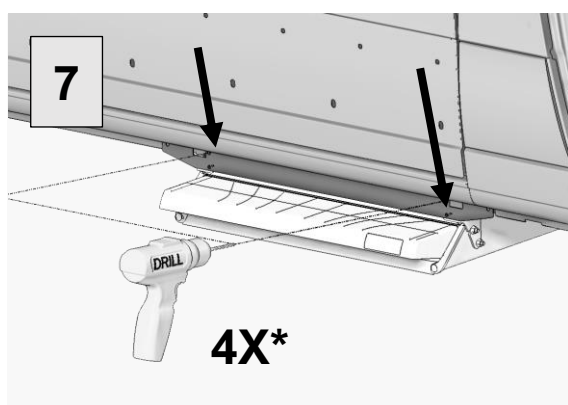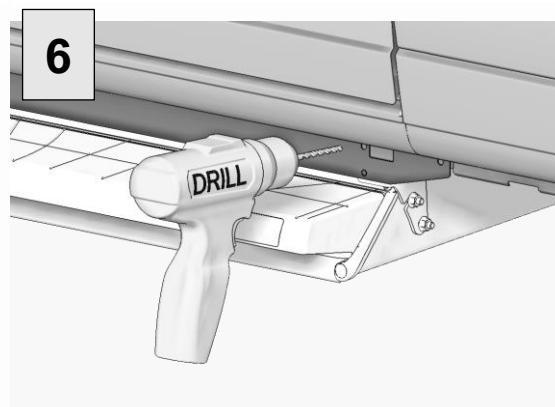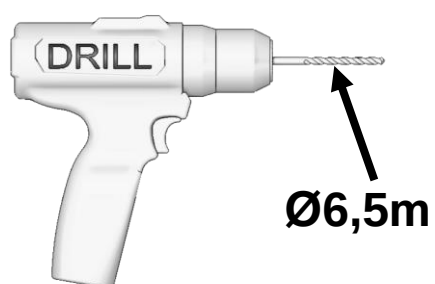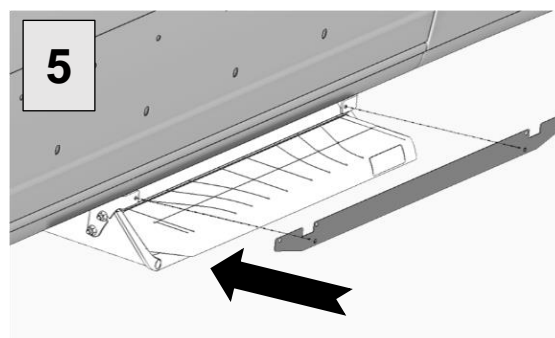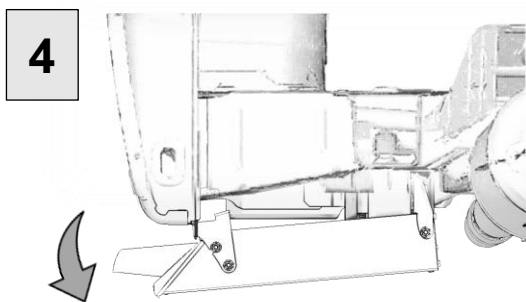


* + 2 (optional)


11

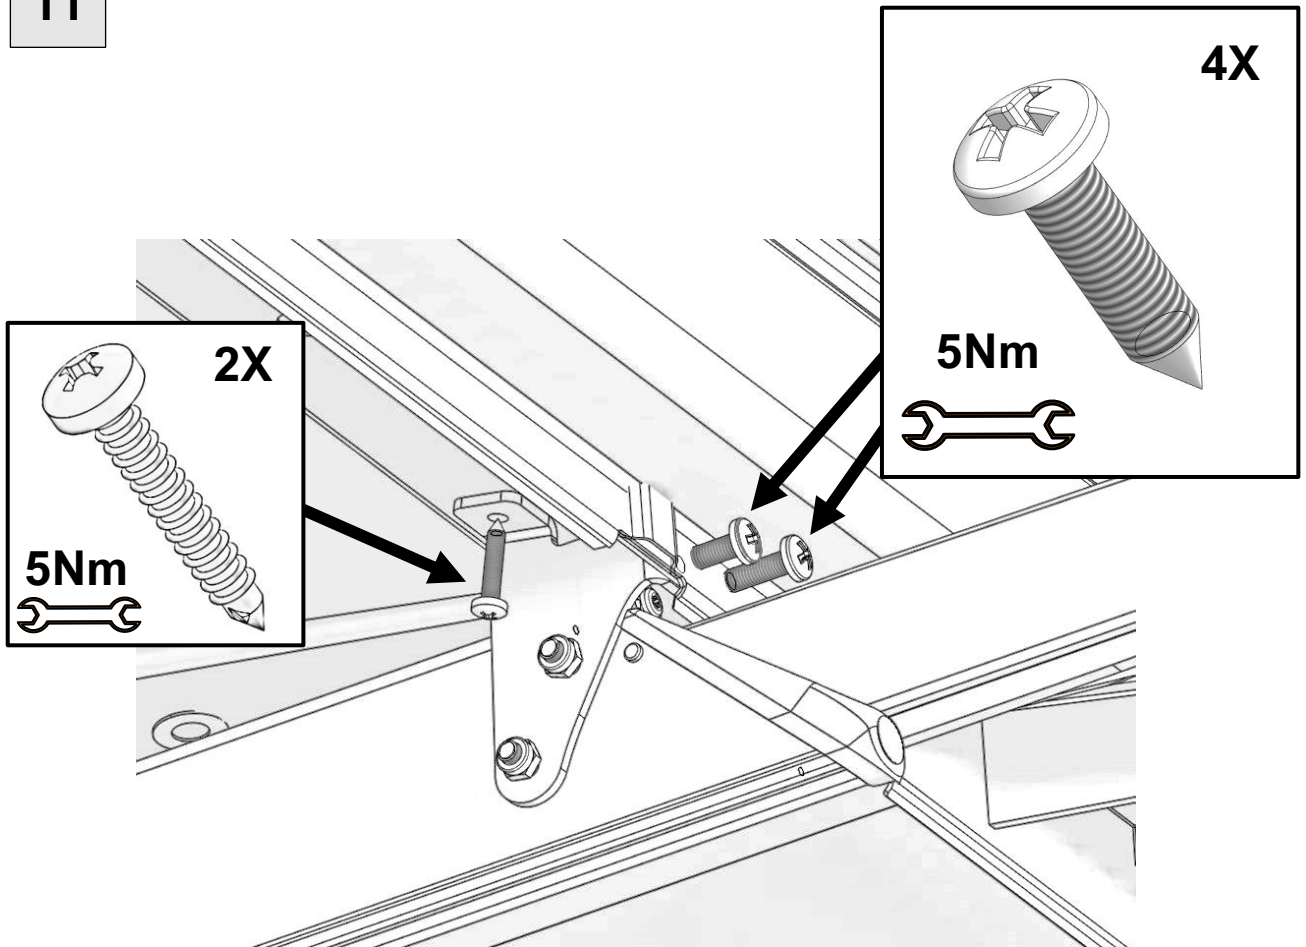

12

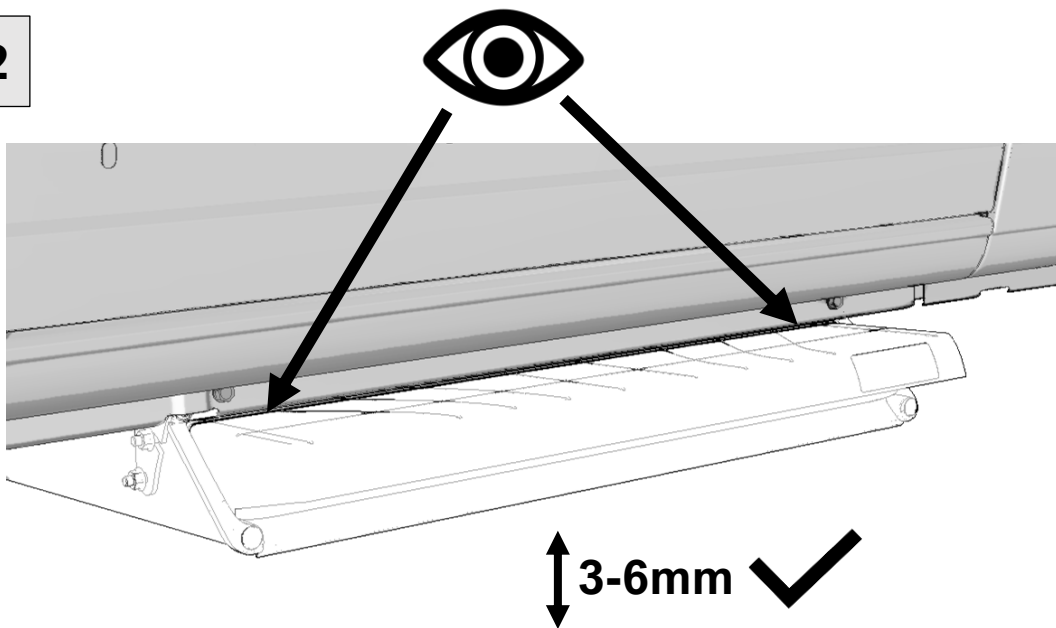


13

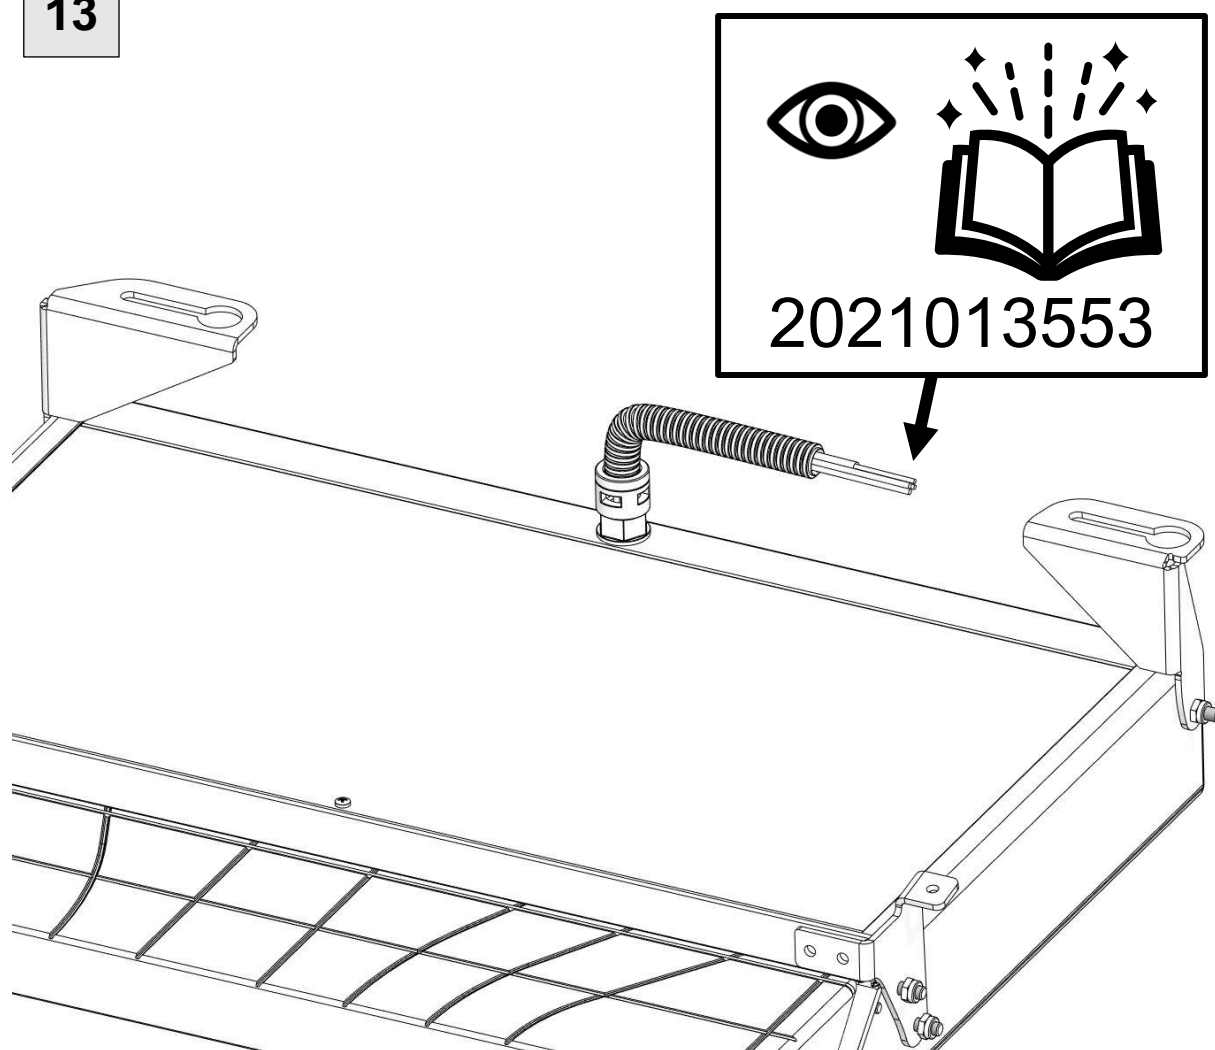


14




5Nm
2X

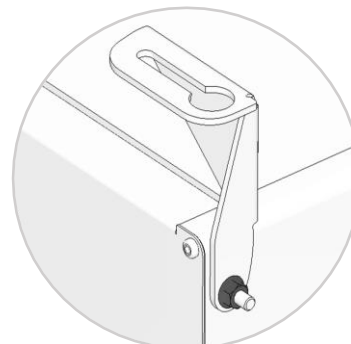



15

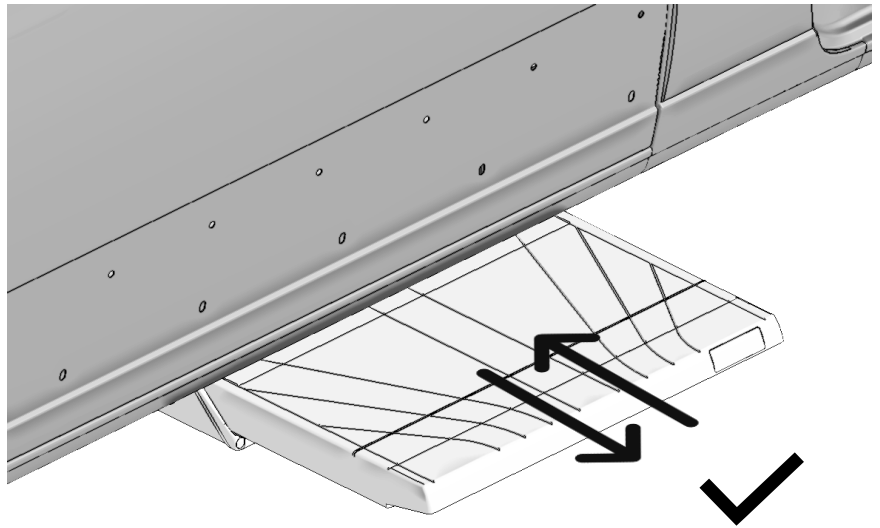


16

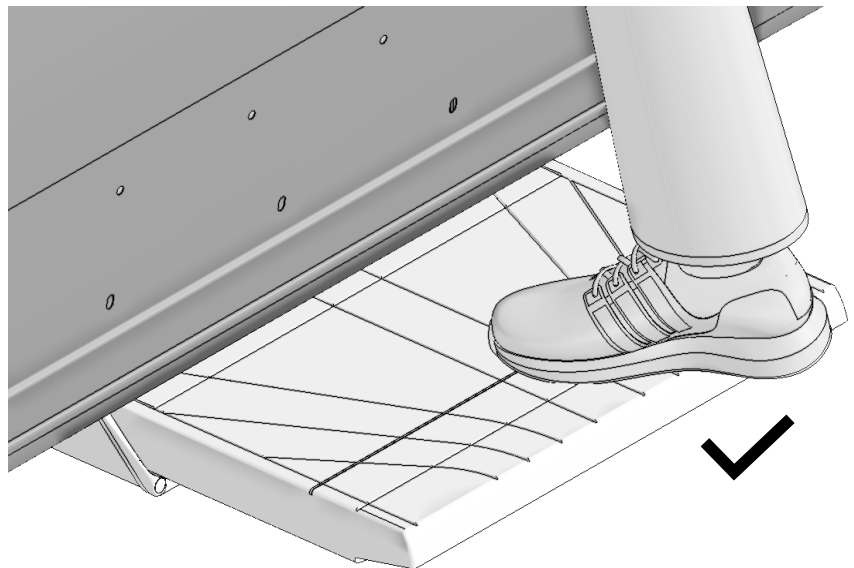


(OPTIONAL)

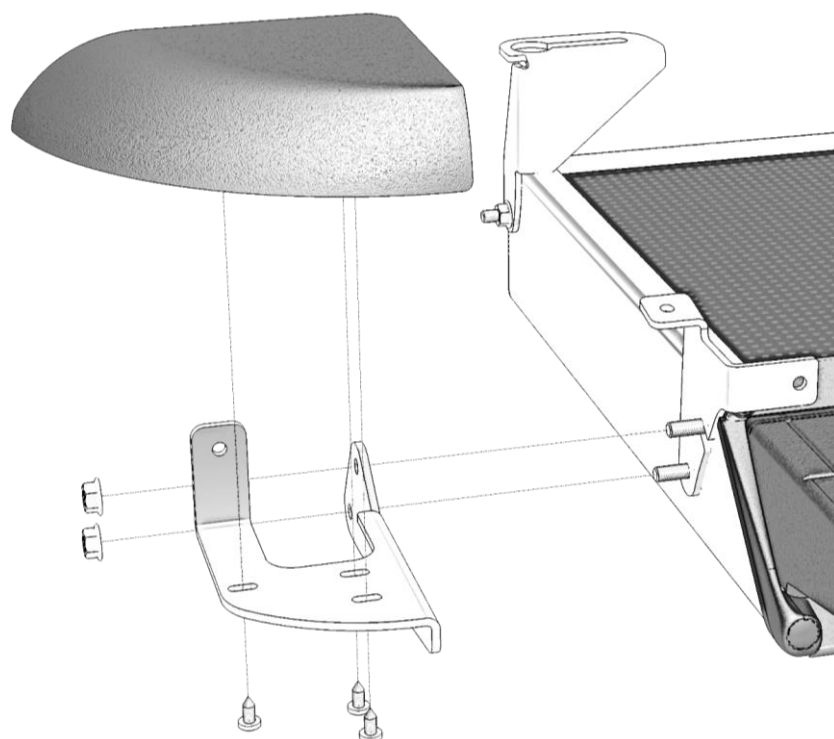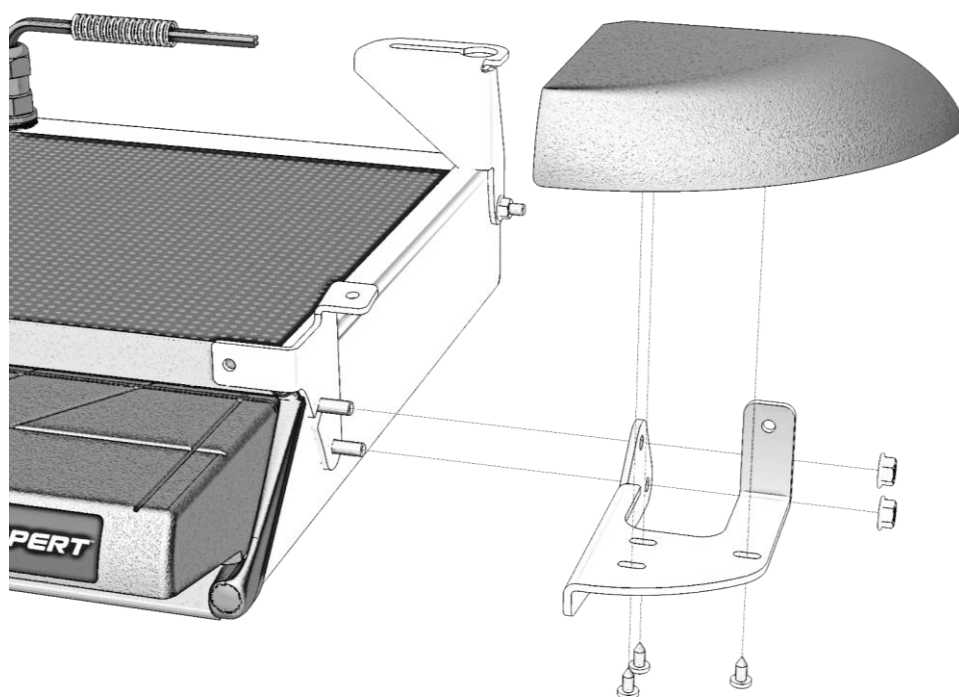


17

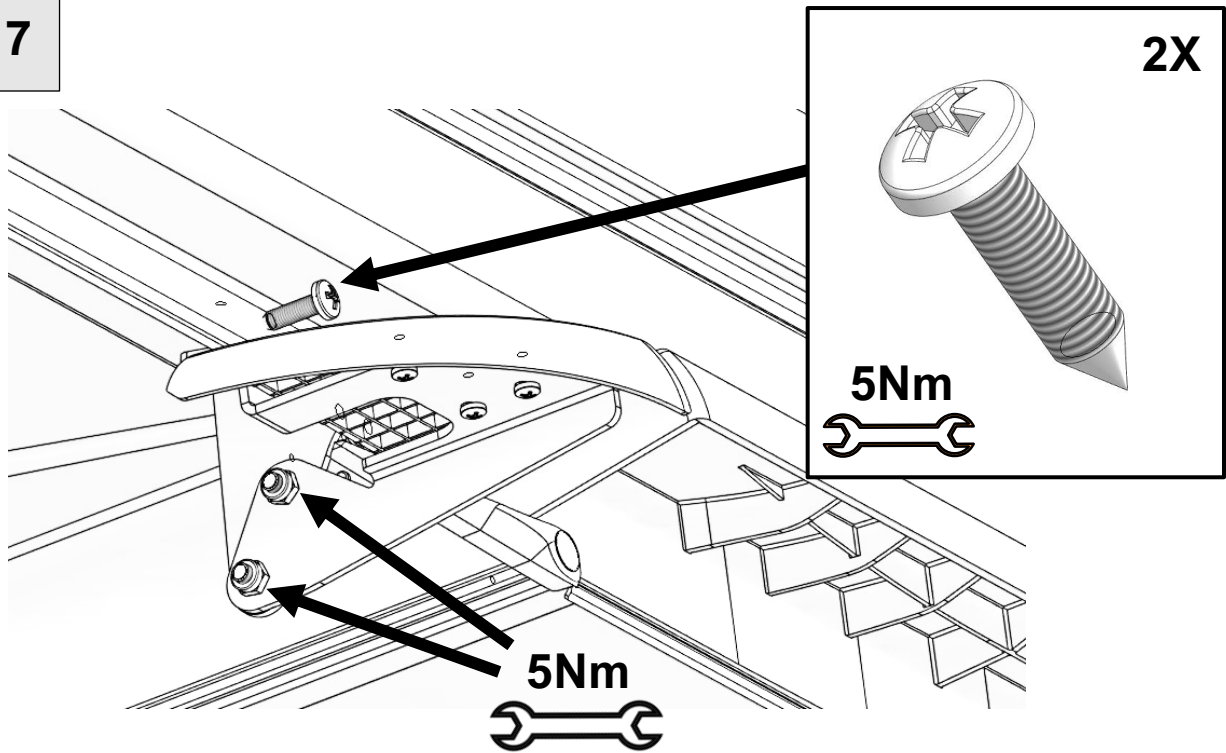

18

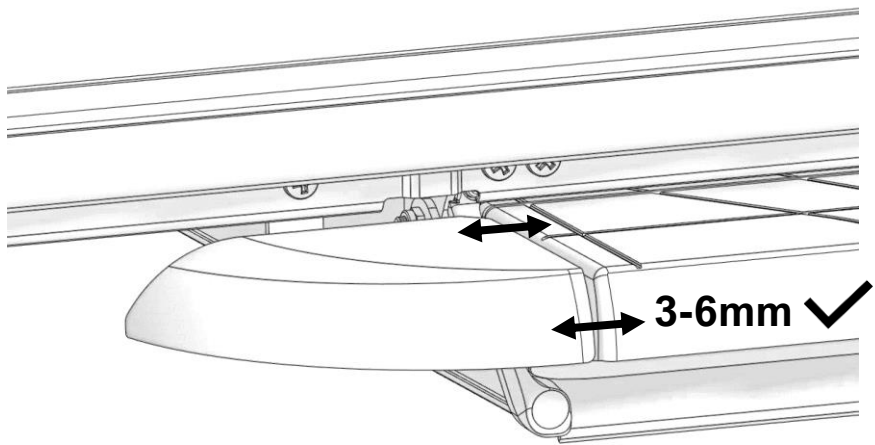

19

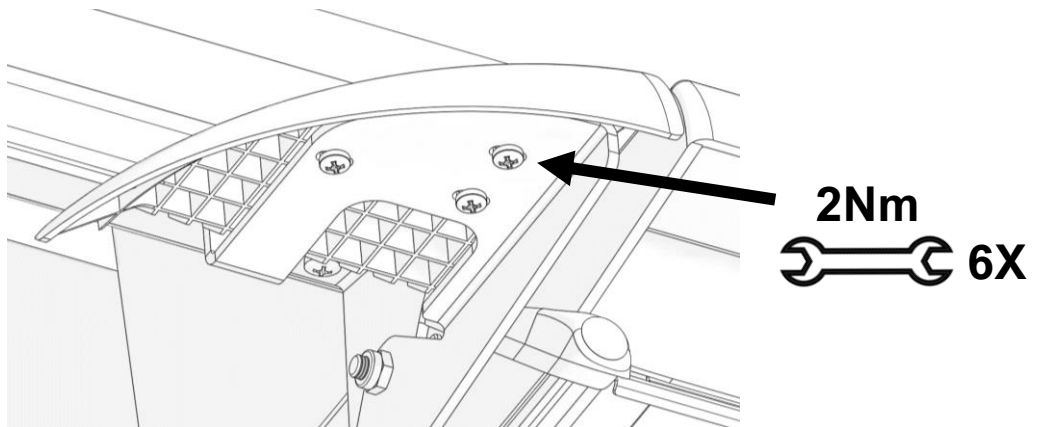



LCI Italy s.r.l.

Via Etruria, 1 – 50026 San Casciano (FI)

web: www.lippertcomponents.eu

E-mail: eu-service@lippertcomponents.com